

# zigi





# zigi

Lb 18.5  
Kg 8.4



**DIMENSIONS (LxWxH)**

without folding:	67x45x102 cm
Total weight:	8.4  18.5




Folding



zigi characteristics:

- Weight : 8.4 kg-18.5 Lbs
- Maximum child weight : 17 kg - 44 Lbs
- Dimensions when folded : L45 x W25 x H56 cm
- Compact, one-hand folding
- Canopy XL with not one but three sunvisors, the second and third which provides extra UV protection. Includes window, which also provides ventilation
- Transparent wheels
- Large basket
- Innovative rear suspension
- Backrest that can recline up to 150 degrees
- Adjustable handlebar
- 5 point safety harness
- Includes raincover
- Colours : Charcoal, Olive Green, Midnight Blue

Compact, one-hand folding

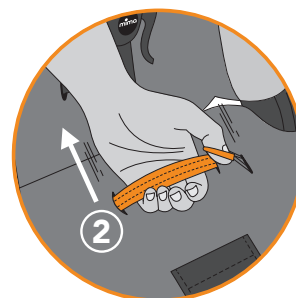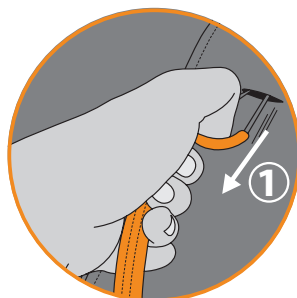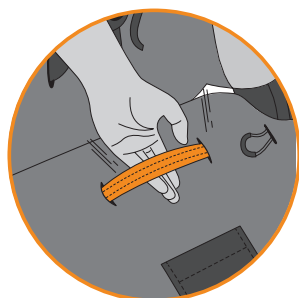



Recline



3 recline positions :



1 Sitting



2 Resting




3 Sleeping

Extended Canopy



Safety Harness

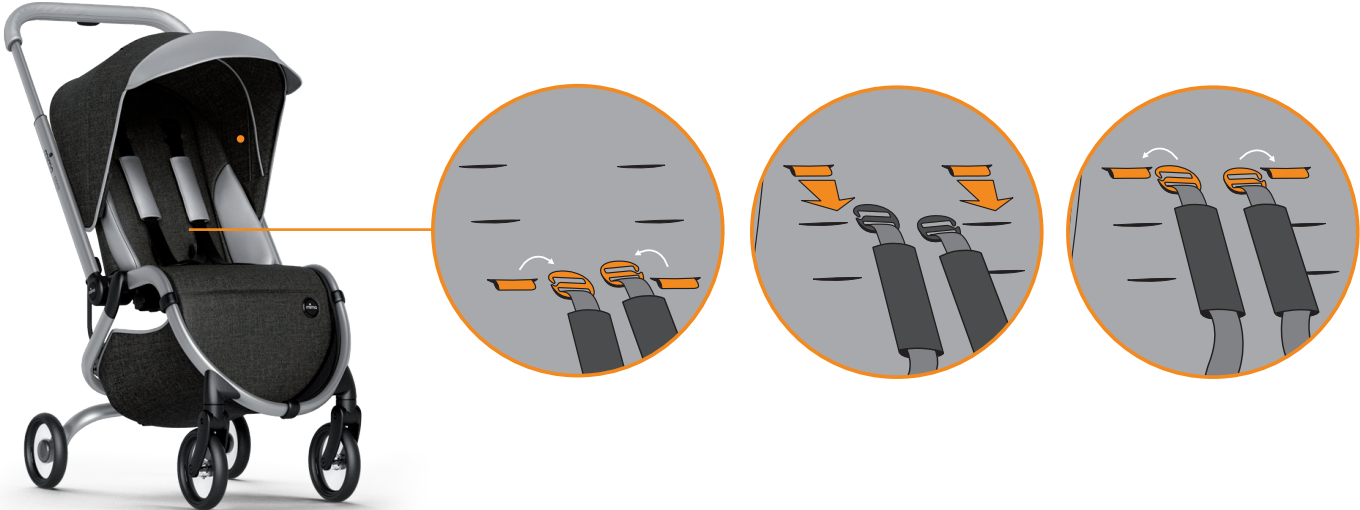

Wheels



front suspension



transparent wheels  
with 360° spin

What's included



Chassis + Softgoods



Rain cover



## Carrycot

zigi is suitable from birth thanks to the carrycot that perfectly adapts to the zigi chassis, allowing baby to be comfortable and safe.



### What's included



Apron



Raincover

### Expand the carrycot

Easily extends and folds down.

When not in use, simply fold the carrycot downwards into the rigid base for easy storage.

Canopy with extendable flaps with UV protection.



mima® zigi

Champagne (New Colour)

Champagne



zigi with Summer Canopy



Carrycot



Footmuff



Sporty Changing Bag



Safety Bar

NEW COLOUR



mima® zigi

Denim (New Colour)

Denim



zigi with Summer Canopy



Carrycot



Footmuff



Sporty Changing Bag



Safety Bar

NEW COLOUR

mima® zigi

Available Colours



Champagne  
A301999  
(NEW)



Denim  
A301810  
(NEW)



Charcoal  
A301201



Midnight Blue  
A301800



Olive Green  
A301401



## Accessories

### Sporty Changing Bag



S3999-10  
(NEW)



S3810-10  
(NEW)



S3201-10



S3800-10



S3401-10

### Footmuff



S301999-06BB  
(NEW)



S301810-06BB  
(NEW)



S301201-06BB




S301800-06BB




S301401-06BB

### Summer Canopy

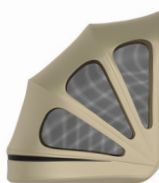


A301999-04  
(NEW)

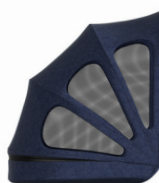


A301810-04  
(NEW)



A301201-04

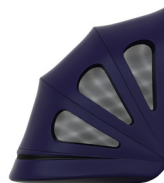

A301800-04

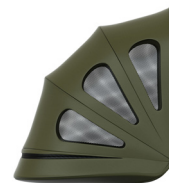

A301401-04

### Safety Bar



A301999-02  
(NEW)



A301810-02  
(NEW)



A301500-02



A301609-02



A301615-02



Accessories

Winter Outfit



S3201-23



S3800-23



S3401-23

Automatic Canopy



A301201-03



A301800-03



A301401-03

Mosquito Net



S301-04

Rain Cover



S301-18

Travel Bag



S301-26

Clip



G101-22X

Cup Holder



G102-21

Adapter Kit



G4105

mima® zigi

Carrycot



Champagne  
A301999  
(NEW)



Denim  
A301810  
(NEW)



Charcoal  
A301201




Midnight Blue  
A301800



Olive Green  
A301401

## Care and maintenance

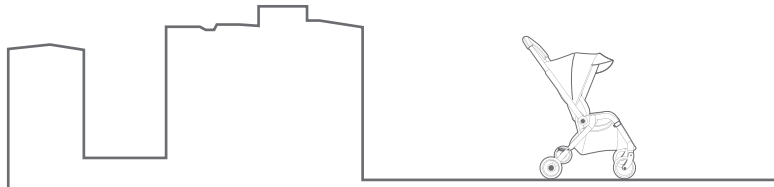

### Cleaning the seat

The seat may be spot cleaned using a damp sponge with a mild soap or detergent. Allow to dry completely before folding or storing away.

If the canopy, accessories or seat become wrinkled or creased after the buggy has been folded for a long period of time, simply iron the fabric on the reverse side. Be sure to place a damp cloth between the iron and the fabric.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this from occurring, store the product in a well ventilated area and refrain from folding.

### Cleaning the chassis

Brush off excess dirt and remove sand and salt after visiting the beach; wipe clean with a moist cloth and mild cleaning agent.

### Lubrication of moving parts

Periodically lubricate the wheels, the hinges and other sliding parts using light oil or silicon spray. Do not use heavy oil as this will attract dust and grit which tends to clog and damage moving parts.

**i** Follow these steps regularly in order to keep the buggy in perfect condition.

**⚠** The fabrics and plastics are highly resistant, but excessive sun exposure can cause discolouring.

## Guarantee



Your product adheres to current safety requirements and it is guaranteed to be in perfect condition at the time of purchase.


If this product shows signs of fabrication faults during the warranty period (after normal use and following the guidelines laid out in the user manual), please contact the seller.

### Warranty conditions:

- The warranty period is 24 months from the date of purchase. This warranty period is not extendable, even in the event of repair.
- For the warranty to be valid you need to:
  1. Provide the original purchase receipt given to your retailer.
  2. Provide a description of the defect to your retailer.
- The warranty is made to the original owner of the product and is not transferable to any subsequent owner.
- The warranty provides a right to repair but does not permit exchanges or refunds.

The warranty does not apply in the following circumstances:

- The product has been modified or repaired by third parties.
- Corrosion or rust on the wheels and chassis due to extreme environmental conditions including high humidity, salt spray, ice or snow or due to insufficient care.
- The defect was caused by improper usage or maintenance or due to anything else deemed to be the fault of the user; in particular, failure to comply with the instructions for use as described in the user manual.
- The defect was caused as a result of an accident or airline/transport damage.
- Normal wear and tear that can be expected with daily use of this product.
- Discolouration or damage to the fabric due to washing, rainwater or excessive exposure to sunlight.
- The defect is the result of overloading (exceeding the maximum weight allowance for the child and any items being carried).

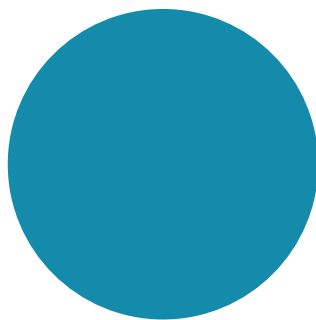

**[www.mimakids.com](http://www.mimakids.com)**  
**[info@mimakids.com](mailto:info@mimakids.com)**

Please note that colours and contents may vary from those illustrated.  
With reservations for misprint and change of product range.  
Regarding mima accessories, always please check availability with your local retailer.  
©Copyright 2018 mima International Ltd. All rights reserved.